



# NMD50 Proper Cassette Setup



1. Remove Cassette from the Bill Dispenser
  - a. Use the **UnLock** button on the Diagnostics screen
2. Verify the Cassette Lock is not broken
3. Open Cassette
4. Remove all bills
5. Verify Cassette height is at **9** (Both sides)

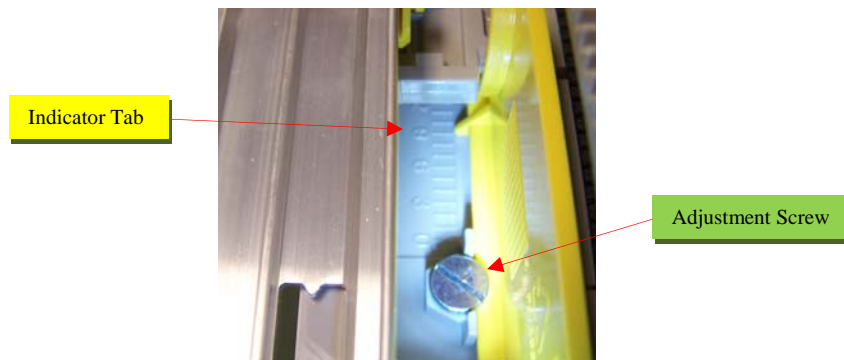


6. Verify Bill length rails are at **H** (left) and **I** (right)

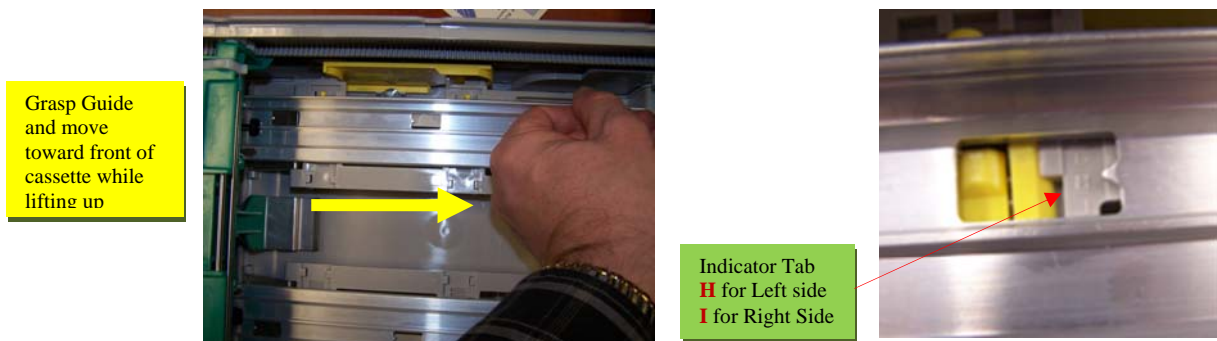


a. If Adjustment is necessary

Guide can now be adjusted from side to side to achieve specifications

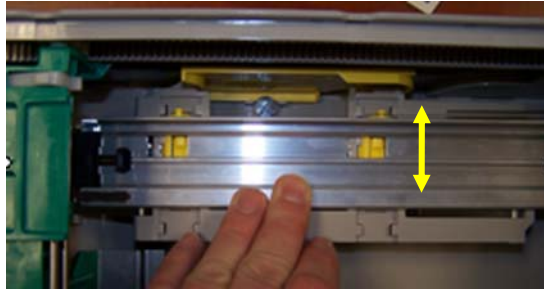

7. Verify Pusher Plate is not skewed both directions

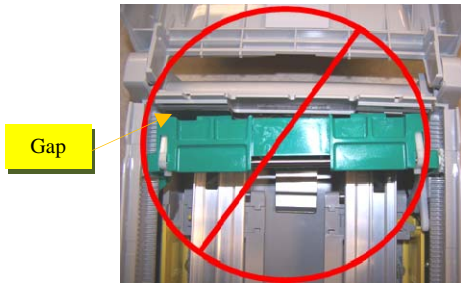

Gap

**BAD**



**GOOD**



Skewed



8. Properly prepare bills

Flip through the stack of Bills to check condition.

- Remove any bills that are in poor condition
- Remove any double folded bills from the stack



## 9. Properly Load bills in the Cassette

Use only notes in good condition and align them evenly



## 10. Pull out the White locking Tabs on green pusher bar

Pull white tabs out before closing cassette.



White Tabs

## 11. Properly close the cassette

Close Cassette by pressing down on the green dot until the latch release button is fully engaged



## 12. Re-insert the cassette into the Bill Dispenser

## 13. Clear the memory of the cassette

- a. Use the **Clear Memory** button on the Diagnostics screen