


Removing the DeLaRue Bill Dispenser from the Auto Sentry-eXP



1. Turn Auto Sentry-eXP power off
2. Pull the Bill Dispenser out
3. Unclip the black harness retainer/guide



4. Disconnect both white connectors
 - a. Power Connector

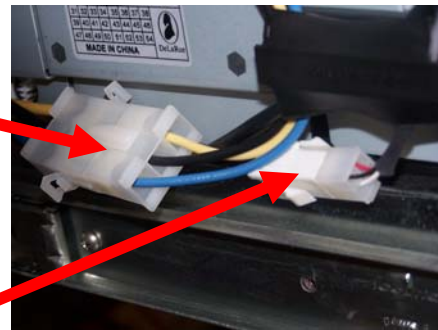

- b. Communications connector

5. Pull off the black Ground “Quick Disconnect” wire by pulling the wire *by the connector* toward you.



6. Pull wire harness up and out of white retaining clip



7. Lift Bill Dispenser Unit up and out of the Auto Sentry-eXP unit. The unit is positioned on the sliding tray by six (6) screws that fit into slots on the tray assembly. Screws are not to be loosened!



8. Re-install the Bill Dispenser unit by reversing the process. Make sure that power is turned off prior to making electrical connections.