



# Removal & Installation Steps for *Talaris*<sup>®</sup> Dispensers\*

\* Formerly *DeLaRue*<sup>®</sup>

Innovative Control Systems  
1349 Jacobsburg Road • Wind Gap, PA 18091  
610.881.8000 • 610.881.8120 – fax • [www.washnet.com](http://www.washnet.com)



# Before You Begin

- Always turn the power to the unit off before you begin.
- Have someone available to help you lift the bill dispenser if necessary.
- A qualified ICS technician can help ensure these instructions are followed correctly. Contact ICS for support.

# Contents

- **Auto Sentry *flex***
  - Removal Instructions, Pages 4–9
  - Installation Instructions, Page 10
- **Auto Sentry *eXP***
  - Removal Instructions, Pages 11–18
  - Installation Instructions, Page 19

# Removing the Dispenser

## Auto Sentry *flex*


- Open side chamber on unit.
- Extend tray.
- Access wiring.



# Removing the Dispenser

## Auto Sentry *flex*


- Disconnect power.

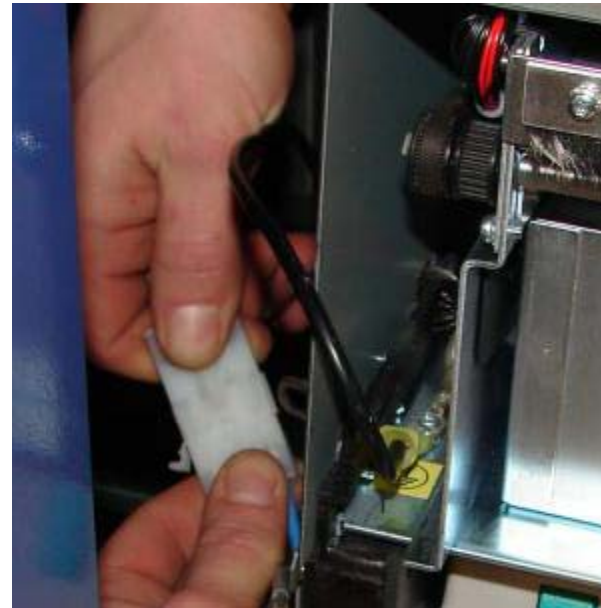

# Removing the Dispenser

## Auto Sentry *flex*

- Disconnect ground.

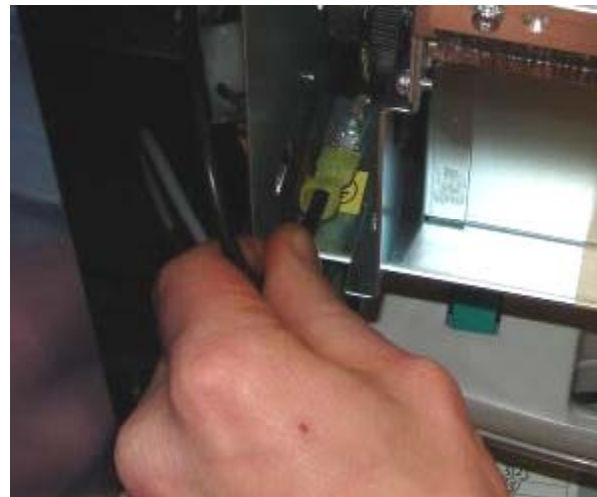

# Removing the Dispenser

## Auto Sentry *flex*



- Disconnect COM.



# Removing the Dispenser

## Auto Sentry *flex*

- Unclip harness.

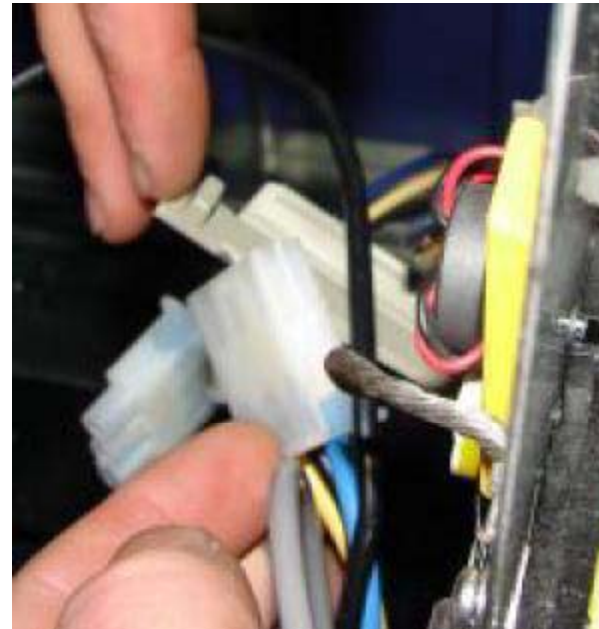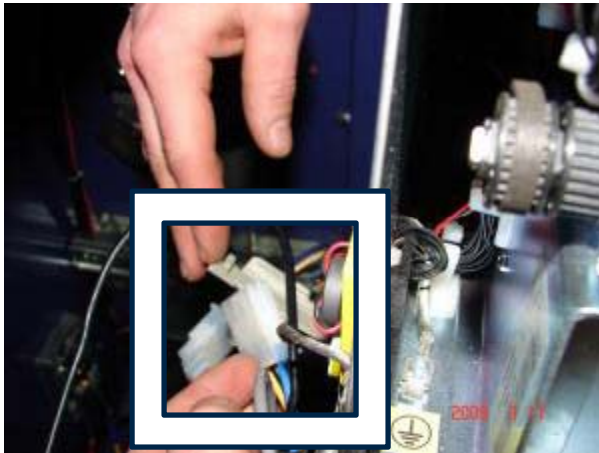



# Removing the Dispenser

- Auto Sentry *flex*
- Lift dispenser off tray.



# Installing Bill Dispenser

## Auto Sentry *flex*


- ✓ Reseat & secure bill dispenser on tray.
- ✓ Reconnect wires.
- ✓ Reclip harness.
- ✓ Close & lock door.
- ✓ Power-on & test.



# Removing the Dispenser

## Auto Sentry *eXP*


- Open front door.
- Loosen wing nut.

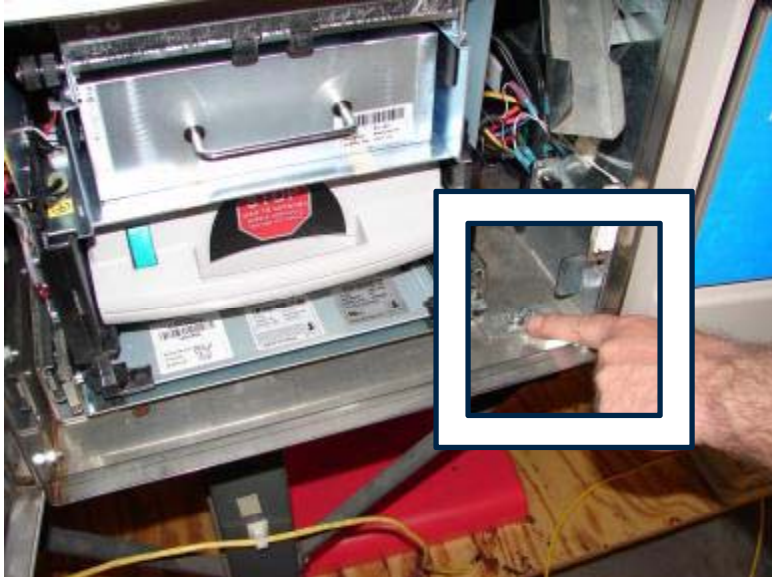

# Removing the Dispenser

## Auto Sentry *eXP*

- Slide bracket away from dispenser.

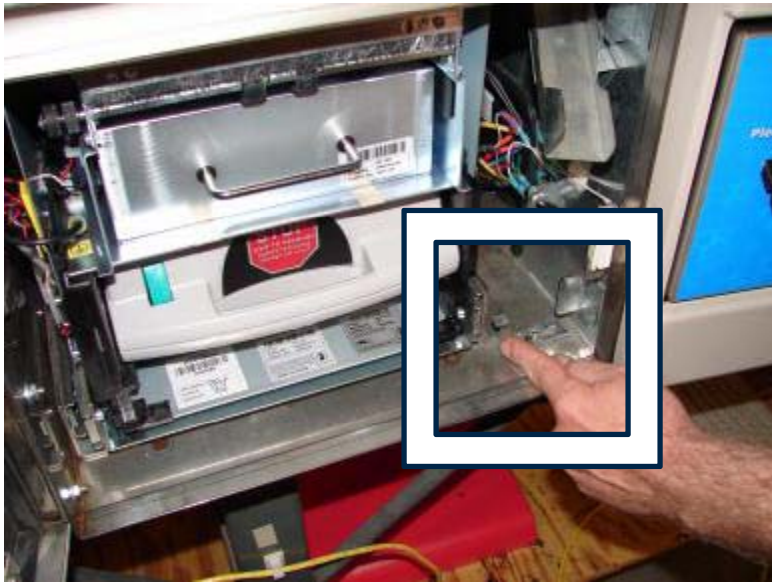

# Removing the Dispenser

## Auto Sentry *eXP*


- Extend tray toward you.



# Removing the Dispenser

## Auto Sentry *eXP*



- Find wire harness on dispenser's left side.
- Unclip harness.

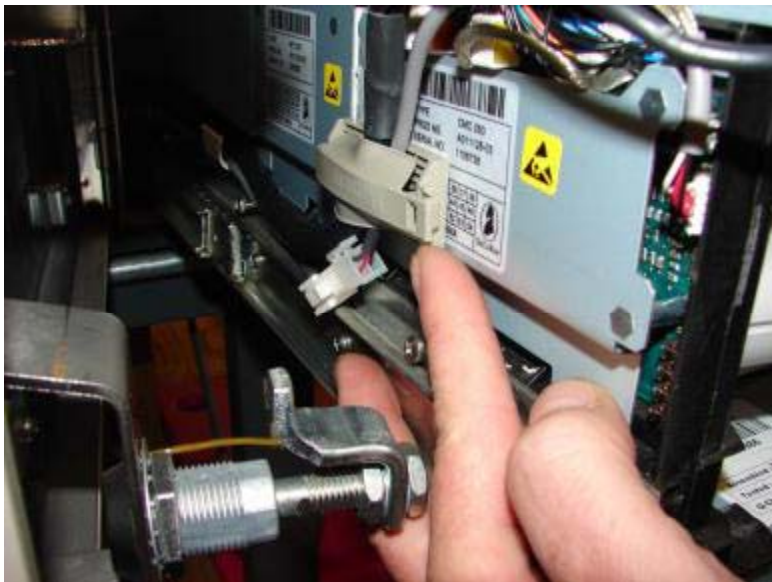

# Removing the Dispenser

## Auto Sentry *eXP*


- Disconnect power.

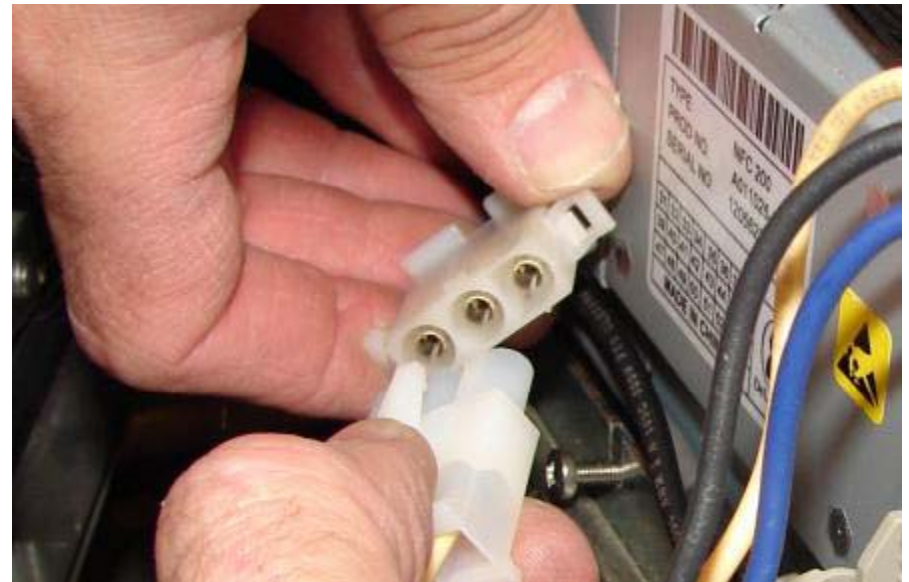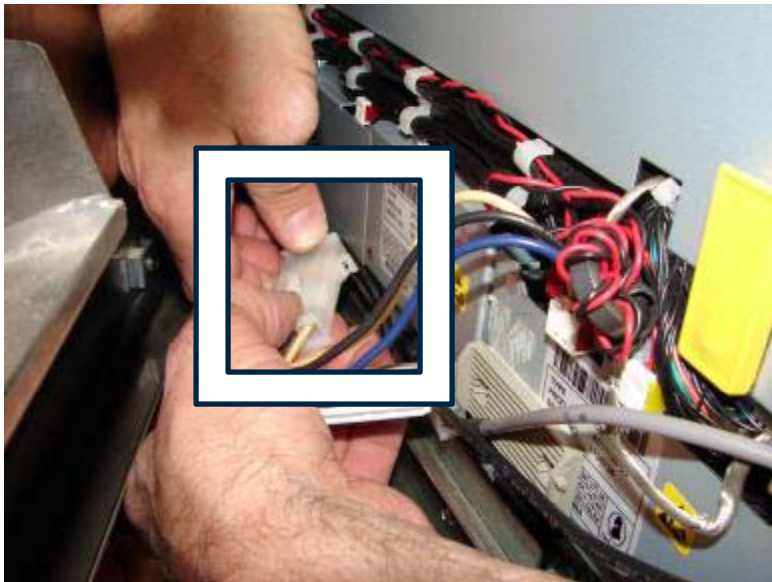

# Removing the Dispenser

## Auto Sentry *eXP*

- Disconnect ground.

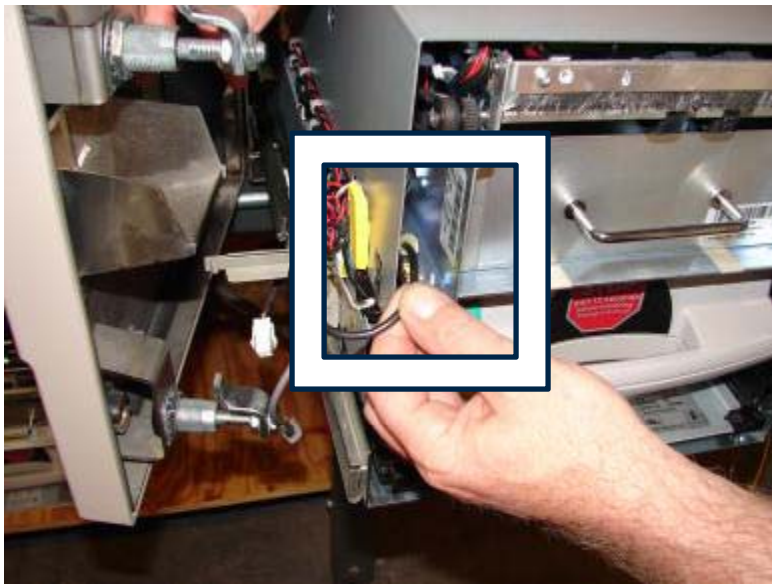




# Removing the Dispenser

## Auto Sentry *eXP*

- Disconnect COM.

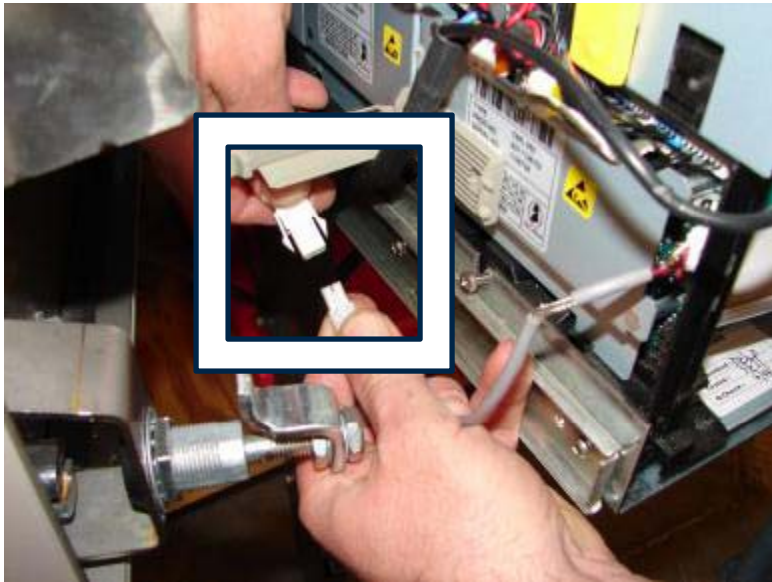

# Removing the Dispenser

## Auto Sentry *eXP*

- Lift dispenser off tray.



# Installing Bill Dispenser

## Auto Sentry *eXP*

- ✓ Reseat & secure bill dispenser on tray.
- ✓ Reconnect wires.
- ✓ Reclip harness.
- ✓ Close & lock door.
- ✓ Power-on & test.





- Contact ICS Support for more information:  
610-881-8001 - Direct  
1-800-642-9396 - Toll free
- Information in this presentation is subject to change without notice. Companies, names and data used in examples within the presentation are fictitious unless otherwise noted. No part of this presentation may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose without the express written permission of Innovative Control Systems, Inc.
- ICS is not responsible for damage, bodily harm, loss of business, etc. due to the information contained in this document. Refer to the standard sales agreement and warranty information that came with your ICS product for more details.

*Auto Sentry, Lube Master and Tunnel Master are registered trademarks of Innovative Control Systems, Inc.*

*Touch 'N Clean and Wash Valet are trademarks of Innovative Control Systems, Inc.*

*DeLaRue is a registered trademark of De la Rue Holdings, plc.*

*Talaris is a registered trademark of Talaris Holdings Limited.*